

AM-4RU Sliding Patch Panel



L-Series AM-4RU Sliding Patch Panel

Before installing or adjusting this product, please read these instructions carefully.
Please keep this guide for future reference.

Safety Precautions



General Precautions

Personnel must be thoroughly familiarized with all applicable Occupational Health and Safety (OH&S) regulations, local regulations, and your company safety practices and policies.

Warning: To reduce the chance of accidental injury:

Before work begins, all personnel must be thoroughly familiar with the operation of all equipment and procedures to be used during the installation.

Before use, all equipment, especially safety gear, must be inspected and tested for proper operation.
Replace and repair as necessary.





Laser Precautions

Warning: The laser light used to transmit information over optical fiber cables can cause severe eye damage. Because this light is invisible, it will not cause the iris of the eye to contract involuntarily as when viewing a bright visible light, and no pain is felt as the retina is burned.



Never look into the end of a fiber or connector which may have a laser coupled to it. Should accidental eye exposure to laser light be suspected, arrange for an eye examination immediately.

Component Overview


L-Series AM-4RU Sliding Patch Panel

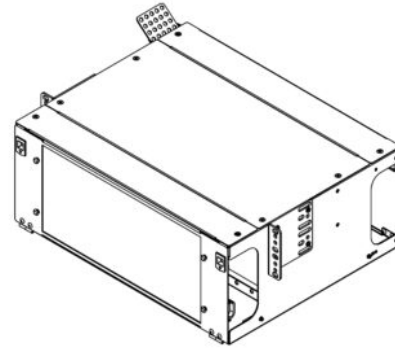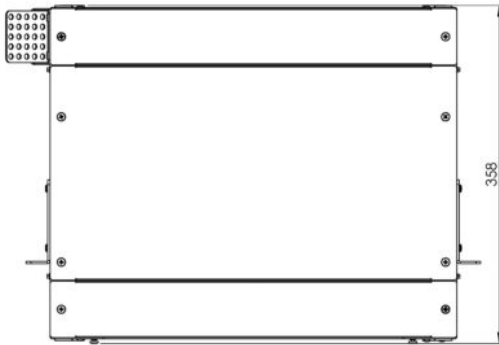


Isometric View

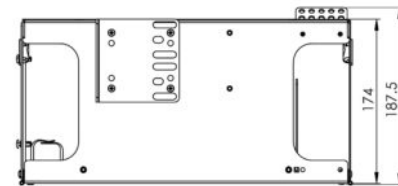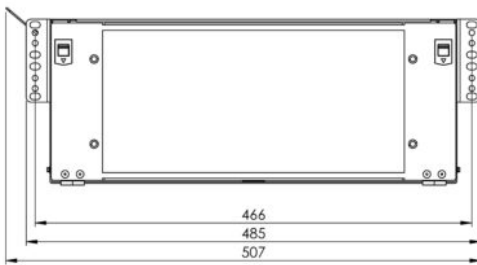


Mounting Bracket

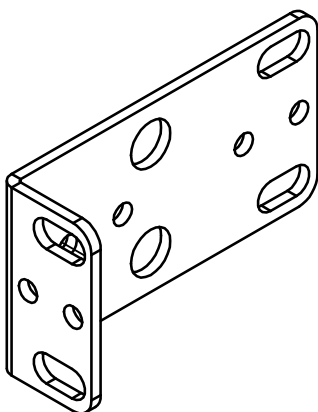

Cable Entry Bracket

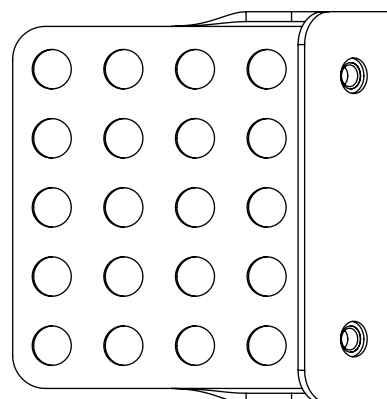


In the Box

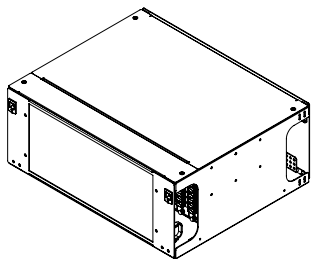


(01) L-Series AM-4RU Sliding Patch Panel

Item Number	Item	Qty
01	L-Series AM-4RU Sliding Patch Panel	1
02	Mounting Bracket	2
03	Cable Entry Bracket	1

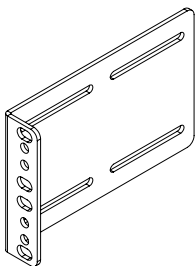


(02) Mounting Bracket

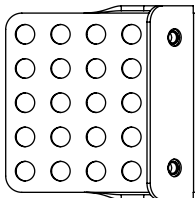


Cable Entry Bracket


What You Will Need



12 x Screws

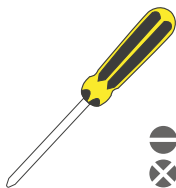


Cross-Head Screwdriver

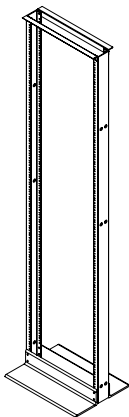


Mounting Frame


Related Products

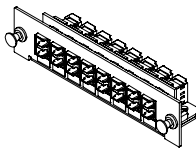


Up to L-Series
Adapter Plates

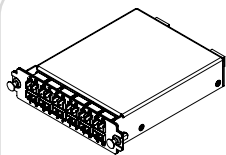

Up to 12 24f L-Series
Cassettes

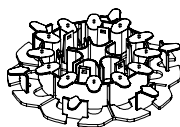


Up to 10 Spools

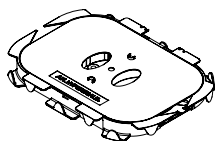


Up to 6 24f Splice Trays

Panel Mounting


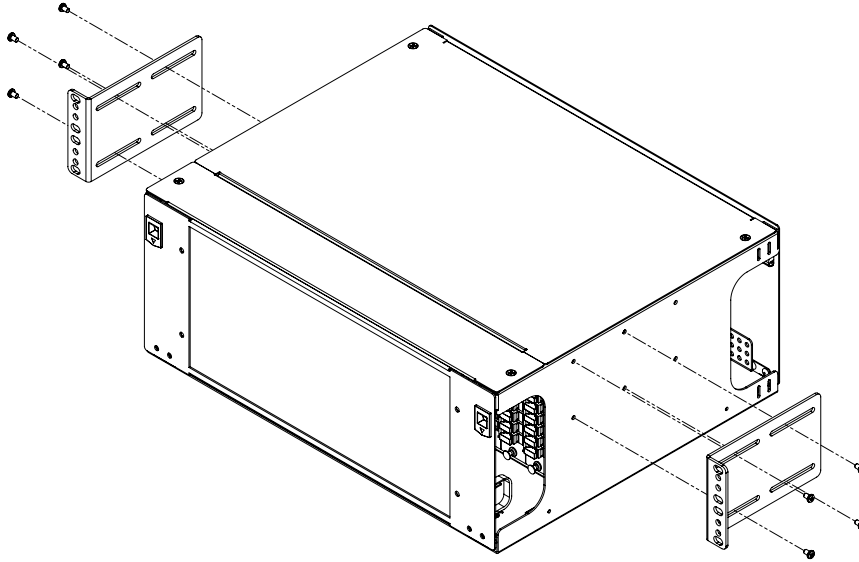
**1**

Once extracted from the box, attach the mounting brackets.

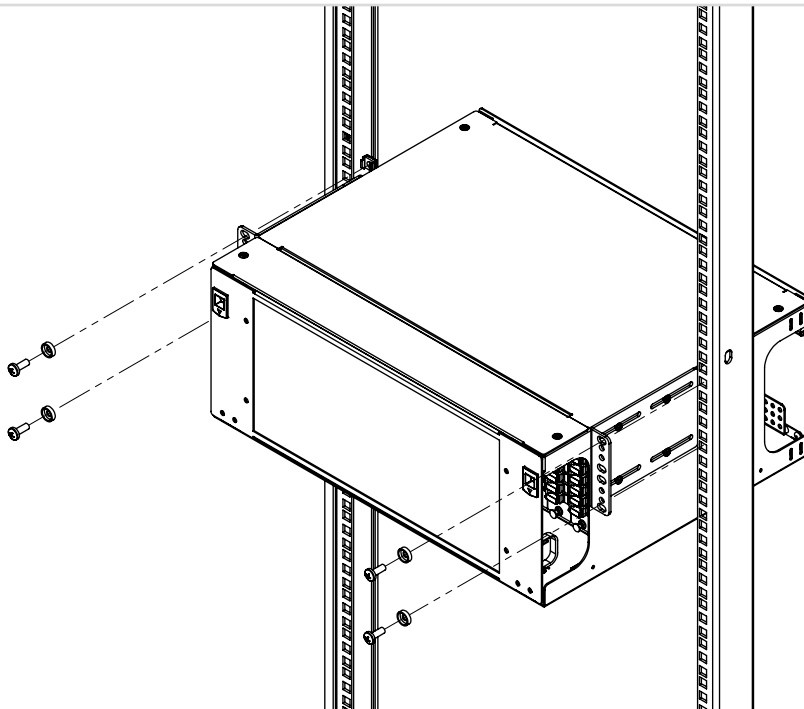**2**

Secure the panel to the 19" profile in the position required using the four screws. Note: Type of screw required may vary depending on the type of frame.

Fiber Cable Routing

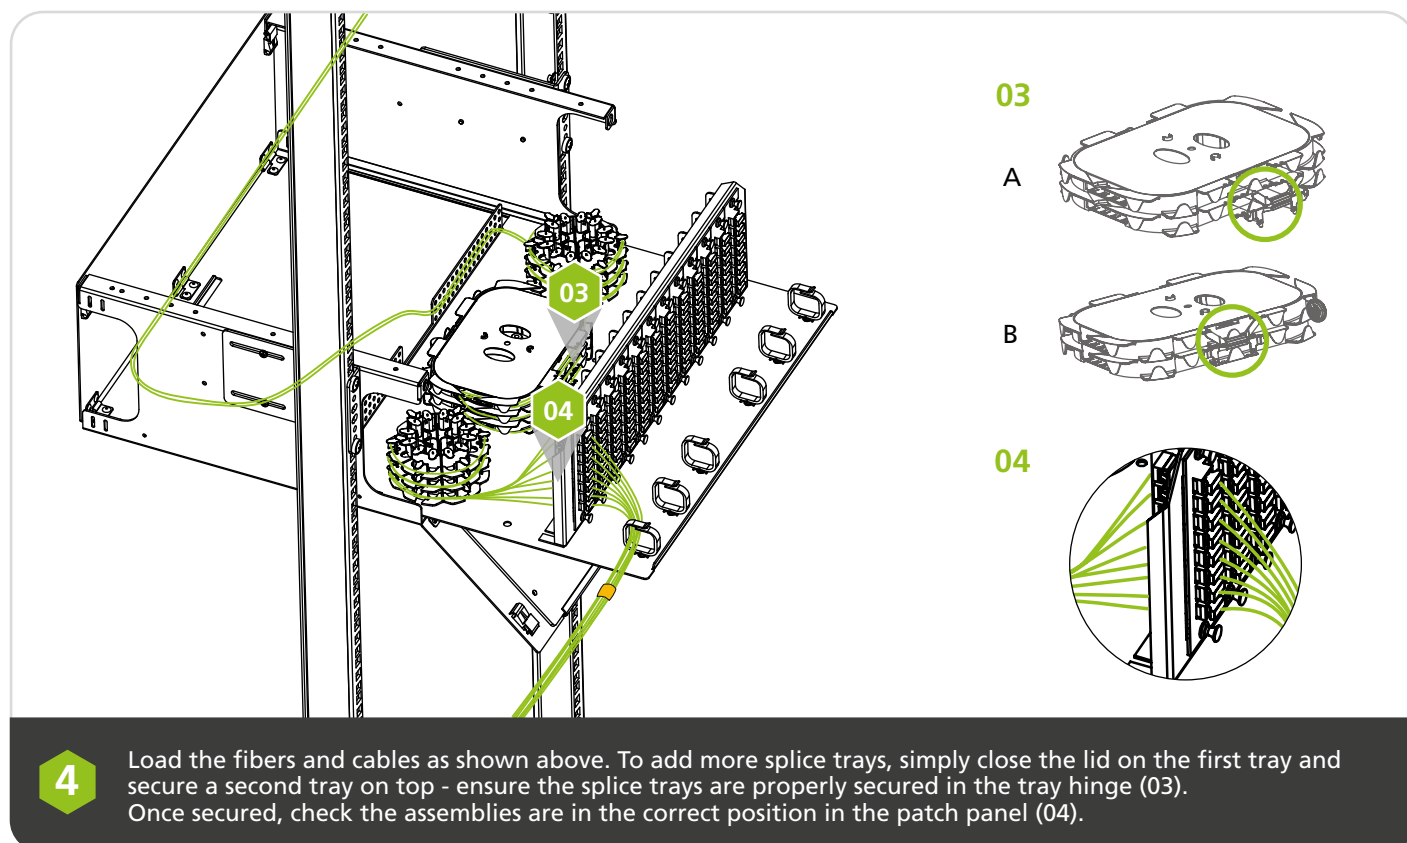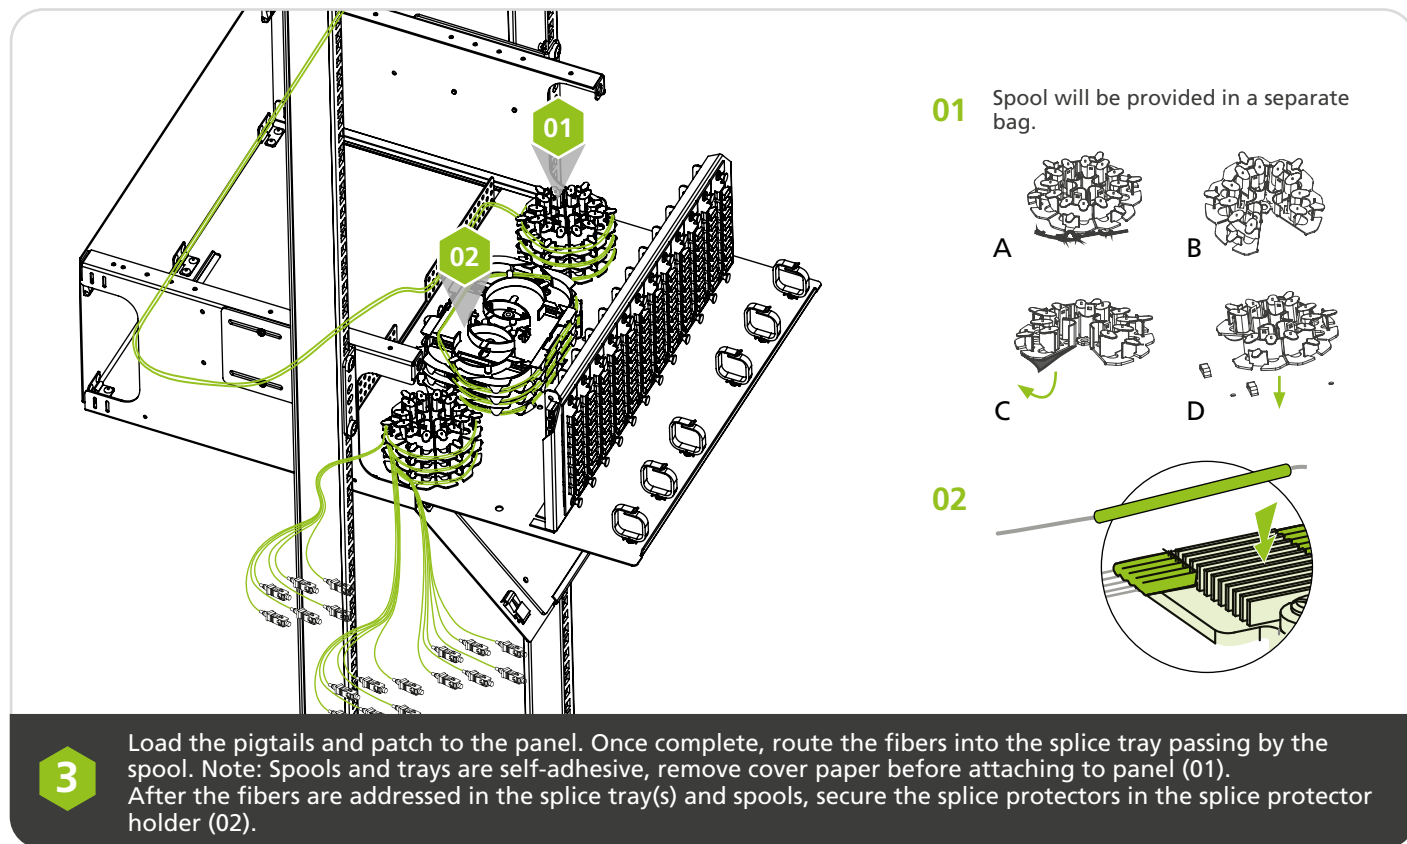

Notes

Thank you for choosing AFL Hyperscale

AFL Hyperscale reserves the right to make changes in this Installation Guide at any time without notice



AFL HYPERSCALE.

www.aflhyperscale.com

AFLHSAM4UPAN311019V1